

INSTALLATION AND MAINTENANCE INSTRUCTIONS <u>2"T-SUPER FILTER</u>

Thank you for selecting an Amiad filters. This filter has been designed to provide years of trouble free service. Please familiarise yourself with these instructions to ensure correct and reliable operation.

INSTALLATION

- 1. Amiad recommends using plastic connectors when installing the filter on to metal pipes.
- 2. Use only Teflon or silicon sealing material on the inlet/outlet connections. Do not use any sealing material on the plastic ball valve connection to the filter drain port. This is a compression type fitting and does not require any sealing material.
- 3. Install a shut-off valve before the filter to facilitate cleaning.
- 4. The filter may be installed in-line (Fig. 1) or at a 90^o Angle (Fig. 2). In either configuration, it must be installed according to the direction of water flow as noted below.
- 5. This filter is available with either a Screen or a Disc element. Be sure the direction of flow is inside/out for the Screen cylinder and outside/in for the Disc element.

WARNING: Improper flow direction or backflow through a screen may damage the filter element.

CLEANING:

The filter requires cleaning when pressure differential between the inlet and outlet reaches 0.5-0.6 bar (7-8 psi). If the filter is equipped with the Amiad "Clogging indicator", the filter should be cleaned when the indicator button pops up.

WARNING: NEVER OPEN THE FILTER WHILE IT IS UNDER PRESSURE

- 1. Close the water supply to the filter and release pressure from the filter by opening the drain valve.
- 2. Unscrew the tightening nut by hand to remove the lid and the filter element. (Do not use tools)
- 3. <u>Screen cylinder</u>: Rinse the screen with water. Use a soft brush for hard-to-remove particles. Do not use a metal brush which may damage the screen.

Disc element: Twist the disc element core nut and unscrew in a counter-clockwise direction. This loosens the disc core. Direct a stream of water along the disc edges to rinse with a spinning action. Hand-tighten the disc element core after cleaning.

- 4. Insert the filter element into the housing. Verify that the housing and element seals are in place. Replace the filter lid and secure in place with the tightening nut. (Do not use tools)
- 5. Close the drain valve and open the inlet valve to pressurize the filter. Check and fix any leaks.

Do not allow the filter pressure differential to exceed 1 bar (14 psi) for an extended period of time.

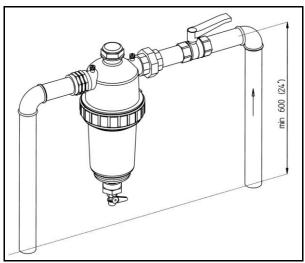


Fig. 1: In-Line installation

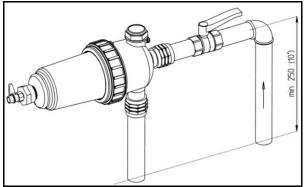


Fig. 2: 90⁰ Angle installation







PARTS SCHEDULE: <u>2"T-SUPER FILTER</u>

| NO. | SAP CAT. NUMBER | DESCRIPTION |
|-----|-----------------|--|
| 1 | 700190-001241 | CAP ASSEMBLY 2"T BSP |
| 1.1 | 710101-000549 | 2" CAP BSPT PP BLACK |
| 1.2 | 770103-000041 | FLAT SEAL 2" NBR 70 SHORE AMIAD DW |
| 2 | 710101-000148 | GAUGE PORT PLUG W/3MM HOLE BSPT RPP BLACK |
| 3 | 770104-000045 | GAUGE PORT SEAL EPDM 45 SHORE |
| 4 | 710103-004372 | HOUSING 2"T/2"T-S PA BLACK BSPT |
| 5.1 | 700101-001512 | DISC ELEMENT PP 130MIC 3" PLASTIC RPP |
| 5.2 | 700101-000415 | MOLDED WEAVEWIRE SCREEN S/ST316L 700 130MIC 3" PLASTIC PP 20GF |
| 5.3 | 700101-000409 | PERFORATED SCREEN S/ST316L 700 2500MIC 3" PLASTIC |
| 6 | 770102-000169 | PARKER O-RING 2-437 NBR 50 SHORE WELL LUBRICATED |
| 7 | 710103-005700 | LID 3"TL RPA BLACK BSPT OUT 11/2" |
| 8 | 710103-000544 | NYLON TIGHTENING NUT BLACK (T FILTER) |
| 9 | 700190-001242 | CONNECTOR 11/2"X3/4" (A) BSPT |
| 9.1 | 710101-000548 | 1.5"X3/4" BUSHING BSPT PP BLACK |
| 9.2 | 770103-000036 | FLAT SEAL 1 1/2" BSP NBR 70 SHORE FOR CAP AMIAD |
| 10 | 300005-000006 | 3/4" BALL VALVE FOR 2"T HOUSING |





AMIAD LIMITED WARRANTY

This certificate applies to Amiad Products purchased by You from Amiad or an Amiad authorized Distributor ("Distributor"). This limited warranty extends only to the original purchaser, and is not transferable to anyone who subsequently purchases, leases, or otherwise obtains the Product from the original purchaser.

- 1 Amiad hereby warrants that the Products are and will be free from defects in material and workmanship under normal use and service. Amiad warrants that it will correct manufacturing defects in the Products, in accordance with the conditions set out in this warranty.
- 2 This warranty is enforceable for a period of 12 months after the date Bill of Lading or equivalent (the "Warranty Period .("
- 3 In the event that during the Warranty Period the Distributor discovers a defect in material and/or workmanship in any Product or part (the "Defective Product"), it shall submit a written complaint to Amiad using Amiad's standard customer complaint form. For the receipt of the customer complaint form, the submission of the complaint or any questions please contact your customer service representative .
- 4 Upon written demand by Amiad the Distributor shall return the Defective Products or a sample thereof to Amiad, at Amiad's cost. If the customer ships any such Product, Amiad suggests the customer package it securely and insure it for value, as Amiad assumes no liability for any loss or damage occurring during shipment. Provided however that in the event Amiad determines that the warranty does not apply to such Product, Distributor shall promptly reimburse Amiad for such cost (including freight and customs). Any returned Product or part must be accompanied by the warranty certificate and the purchase invoice. It is clarified that the Distributor may not return the Defective Product unless such return was coordinate and approved by Amiad in advance.
- 5 Amiad's obligation under this warranty shall be limited to, at its option, the repair or exchange, free of charge, of the Product or any part which may prove defective under normal use and service during the Warranty Period. The provision of a repaired or replacement Product during the Warranty Period will result in an extension of the Warranty Period by an additional period of 12 months, provided that the total accumulated Warranty Period shall in any event be no more than 18 months from the original Bill of Lading .
- 6 This warranty is valid on the condition that the Products are installed according to Amiad's instructions as expressed in Amiad's instruction manuals and according to the technical limitations as stipulated in Amiad's literature or as stated by a representative of Amiad .
- 7 This warranty will not apply to damaged or defective Products resulting from or related to :
- i) Fire, flood, power surges or failures or any other catastrophe/and or unforeseen occurrence, such as but not limited to those for which the customers are customarily insured ;
- ii) Fault, abuse or negligence of the customer ;
- iii) Customer's responsibilities, including the failure of the intake water to meet the agreed standards, as set forth in a written document, approved by Amiad or improper storage .
- iv) Improper or unauthorized use of the Product or related parts by the customer, including the customer's failure to operate the Product in conformity with the recommendations and instructions of Amiad, as set forth in Amiad's manuals and other written materials, the operation of the Product other than by a trained and qualified operator, or improper installation of the Product by a third party not authorized by Amiad ;
- v) Performance by the customer of maintenance and other services other than by a trained and qualified advanced operator, or other than in conformity with the recommendations and instructions of Amiad, or other than in accordance with procedures defined in the literature supplied for Products ;
- vi) Any alteration, modification foreign attachment to or repair of the Products, other than by Amiad or its authorized technical representatives .
- 8 In no event shall Amiad be liable to the customer or any third party for any damages, including indirect, special, exemplary, punitive or consequential damages, or lost profits arising out of or in connection with this warranty, or arising out of or in connection with the Product's performance or failure to perform, even if it has been advised of the possibility of such damages .
- 9 Amiad will be excused for failure to perform or for delay in performance hereunder if such failure or delay is due to causes beyond its reasonable control or force majeure preventing or hindering performance.
- 10 The limited warranty set forth herein is the only warranty given by Amiad and is provided in lieu of any other warranties created by any documentation, packaging or otherwise .
- 11. Amiad makes no warranty whatsoever in respect of accessories or parts not supplied by Amiad. In the event that Amiad is required to correct a defective Product or product not covered by this warranty, it will do so solely in consideration for additional fees.